 
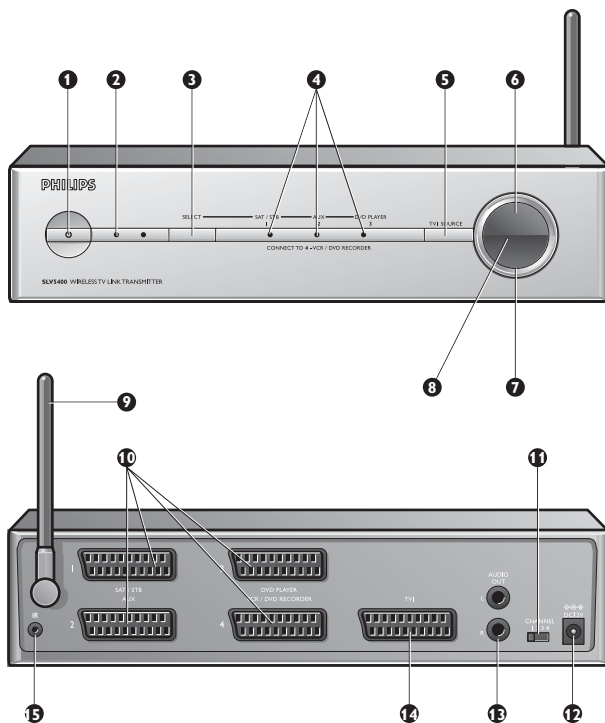 
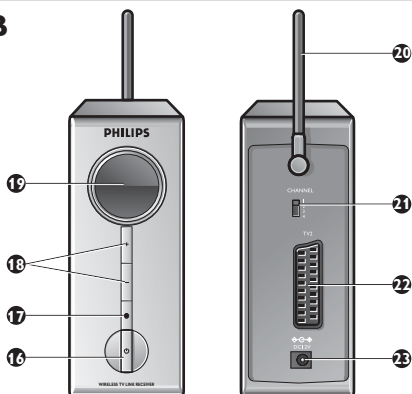 


User Manual

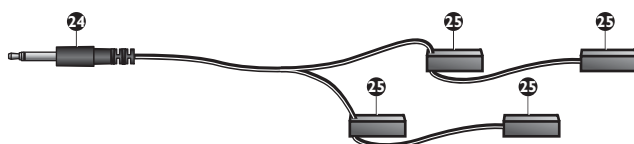

PHILIPS

A**B****C****G**

	Page
Overview	4
Control and display elements	4
Your Wireless TV Link	5
Safety	5
Installation	6
Operation	7
Enjoy your Wireless TV Link	7
Use additional features	9
Troubleshooting	10
Information	12
Health and safety	12
Maintenance and service	12
Recycling and disposal	12
Warranty	13
Glossary	13

Control and display elements

A Transmitter

- 1 On/off switch
- 2 Power light:
 - > *red: standby*
 - > *green: on*
 - > *blinking: remote control signalling*
- 3 **RECORD SOURCE** button
- 4 Link source indication lights
- 5 **TV1 SOURCE** button
- 6 **AUTO** light
- 7 Integrated remote control blaster light
- 8 TV1 source indication display
- 9 Antenna
- 10 **SCART** ports:
 - > **1-SAT/STB**
 - > **2-AUX**
 - > **3-DVD** (for RGB signals)
 - > **4-VCR/DVD recorder** (for RGB signals)
- 11 Wireless channel selection switch
- 12 Power input connector (DC 12V)
- 13 **AUDIO OUT** connectors (red/white)
- 14 **SCART** port for **TV1**
- 15 Remote control blaster cord port

B Receiver

- 16 On/off switch
- 17 Power light
 - > *red: standby*
 - > *green: on*
 - > *blinking: remote control signalling*
- 18 Source selector buttons (+/-)
- 19 Integrated remote control blaster light
- 20 Antenna
- 21 Wireless channel selection switch
- 22 **SCART** port for **TV2**
- 23 Power input connector (DC 12V)

C Remote control

G Remote control blaster cord

- 24 Connector
- 25 Blaster light

You can say good-bye to wires. With your Wireless TV Link you can now wirelessly connect a second TV and choose between four devices to watch on your second TV.

Safety

 
- Read the instructions in this manual carefully before you connect, install and use the product.
- Keep this manual for future reference.
- The product is for indoor use only.
- Do not use the product close to water.
- Do not expose the product to extreme heat.
- In case of technical difficulties, do not open the product. Bring it to your Philips dealer.
- Do not cover the product.
- Connect the power adapters only to a 220-240 V AC/50 Hz power supply.
- The product can cause interference to other equipment. Check if any equipment near the product can be affected before you start using it.

For basic installation, see the quick start guide that came with your Wireless TV Link.




Install the remote control blaster cord

- 1 Switch off the transmitter (A).

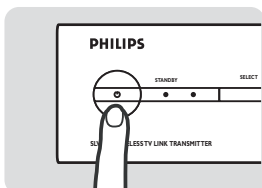


- 2 Connect the remote control blaster cord (G) to the IR port.
- 3 Position the blaster light in front of the video source.

 
See the user manual of the video source for the exact location of the IR sensor on the front panel.

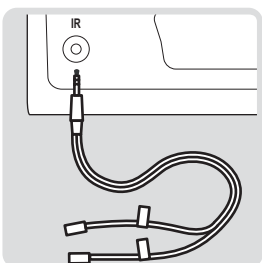


 - 4 Switch on the transmitter (A).
- 5 Take the remote control of a video source with you.
- 6 Go to TV2.
- 7 Switch on TV2.

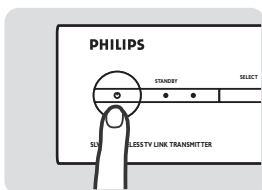

  
- 8 Switch on the receiver (B).
- 9 Select the correct SCART input on TV2.
- 10 Operate the video source with its remote control.
- 11 If necessary, repeat the steps 3 to 10 for the other video sources.

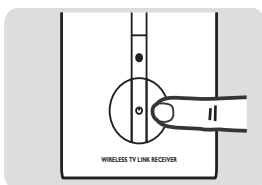

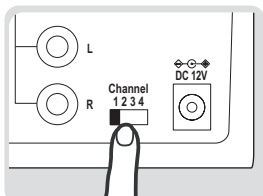

Remove interference on TV2

 - 1 Find the **CHANNEL** switch on the transmitter (A).
- 2 Set the **CHANNEL** switch to different number.

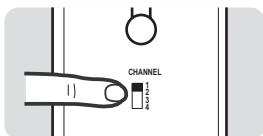

- 3 Find the **CHANNEL** switch on the receiver (B).
- 4 Set the **CHANNEL** switch to the same number as on the transmitter.

Operation

 
Enjoy your Wireless TV Link

For basic operation, see the quick start guide that came with your Wireless TV Link.




Watch a cable TV program on TV2


Your VCR or DVD recorder needs to be connected to the transmitter (A) of the Wireless TV Link and connected to the Cable-TV signal.

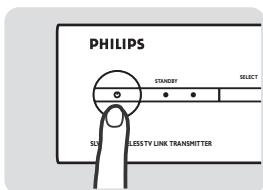

 - 1 Switch on the transmitter (A).
- 2 Switch on the VCR or DVD recorder.
- 3 Take the remote control of the VCR or DVD recorder with you.
- 4 Go to TV2.

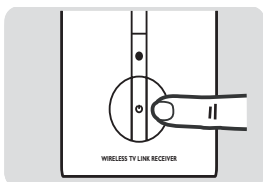

 - 5 Switch on TV2.
- 6 Switch on the receiver (B).

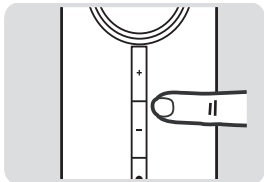

- 7 Press + or - on the receiver (B) to select the VCR or DVD recorder;
or: press 4 on the remote control (C).
- 8 Select the channel on the VCR or DVD recorder with its remote control.

 
Turn off the auto standby mode when you use the VCR or DVD recorder to watch a cable tv program. Refer to the user manual of the VCR or DVD recorder.

If the VCR or DVD recorder records a television program, you watch the recorded channel.

Watch a video source on TV1


Either: automatic

Operate TV1 and the video source as usual.

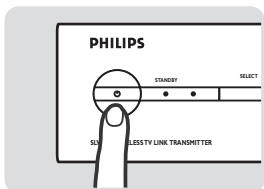


Or: manual

 - 1 Switch on the transmitter (A).
- 2 Switch on TV1.
- 3 Select the correct SCART input on TV1.

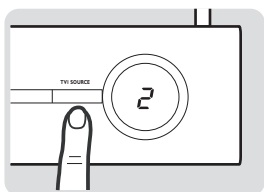


- 4 Select the video source with **TV1 SOURCE**;
or: press + or - on the remote control (C).
- 5 Switch on the video source.
- 6 Operate the video source with its remote control.

 Use additional features

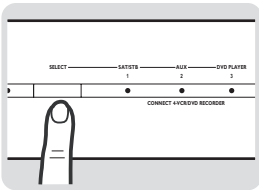

Use VCR/DVD recorder features

 - 1 Select a video source with **SELECT**.
 - > *The signal of the video source is connected to the VCR/DVD recorder.*
- 2 Select the correct SCART input on the VCR or DVD recorder.
- 3 Push **RECORD** on the VCR or DVD recorder.
- 4 Push **PLAY** on the video source.
 - > *The VCR or DVD recorder now records the image of the video source.*

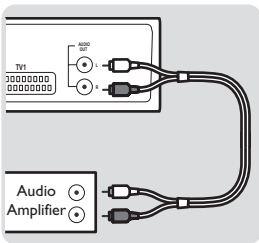

Sound through your audio amplifier

- 1 Take an audio cable (red and white plugs).
- 2 Plug the connectors of one end into the **AUDIO OUT** connectors on the transmitter (A).
- 3 Plug the connectors of the other end into the **AUDIO IN** connectors of your amplifier.



Be responsible
Respect copyrights

The making of unauthorised copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Problem	Tip
No image or wrong image on TV1	<ul style="list-style-type: none"> • Make sure video sources are connected to the transmitter (A). • Make sure the transmitter (A) is connected to TV1. • Make sure SCART cables are firmly inserted. • Make sure the video source is switched on. • Make sure the correct SCART input on TV1 is selected. • Select the correct video source with TV1 source. See page 8.
No image or wrong image on TV2	<ul style="list-style-type: none"> • Make sure SCART cables are firmly inserted. • Make sure the receiver (B) is connected to TV2. • Make sure both receiver (B) and transmitter (A) are switched on. • Make sure the video source is switched on. • Make sure the correct SCART input on TV2 is selected. • Select the correct video source with +/- on the receiver (B). • If the video source gives proper image on TV1: Make sure the video source gives video signal in CVBS mode. See its user manual • Change the wireless channel that is used for communication. See page 7. • The receiver (B) is out of range of the transmitter (A). The number of walls and ceilings in between the receiver (B) and transmitter (A) restrict the distance.

Problem	Tip
Interference in the image on TV2	<ul style="list-style-type: none"> • Slightly change the position of the receiver (B) or the transmitter (A). • Change the wireless channel that is used for communication. See page 7. • The receiver (B) is out of range of the transmitter (A). The number of walls and ceilings in between the receiver (B) and transmitter (A) restrict the distance.
The video sources do not respond to the remote control commands from TV2	<ul style="list-style-type: none"> • Point the remote control directly to the receiver (B). • Replace the batteries of the remote controls with new ones. • Install the remote control blaster cord (G). See page 6. • The maximum operating distance of the remote control is 5 m.
The image of the video source disappears on TV2	<ul style="list-style-type: none"> • Turn off the auto standby mode of the video source. See its user manual. • Follow the instructions to reconnect the video sources. See the quick start guide.
Buzzing sound when you use the remote control.	<ul style="list-style-type: none"> • Slightly change the position of the receiver or the transmitter until the buzzing sound stops. • Sometimes it is not possible to solve the problem.
Black and white image with S-VHS VCR.	<ul style="list-style-type: none"> • Check if the SCART connector of the S-VHS VCR gives signal in CVBS. See its user manual.
Cannot record a DVD or video tape.	<ul style="list-style-type: none"> • Check if you used full-wired SCART cables. • DVD or video tape is copyright protected.

Health and safety

The product transmits and receives radio waves when it is switched on. The product complies with the standards that are defined for it.

The quality of the image can be influenced by the use of microwave ovens. Other wireless systems (Bluetooth, wireless networks etc.) can also have influence on the quality of the image.

The product is based on RF technology. Therefore the product can suffer from the same kinds of interference as GSMs, portable radios and other RF-based products.

Maintenance and service

If your product is defective and needs repair, but your warranty period has expired, you can consult our specialists (see the rear page)

Recycling and disposal

All redundant packaging material has been omitted. Your set consists of materials that can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, batteries and old equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



Warranty

One year limited warranty

For 12 month from the date of purchase the manufacturer repairs or replaces any faulty product free of charge, subject to proof of purchase, provided the fault has not been caused by improper handling or use, and provided the product has not been damaged, whether as a result of an accident or of repair by others than the manufacturer.

Glossary

CVBS	Video standard for showing colors on a TV.
Easylink	Gives a VCR or DVD recorder the possibility to automatically take over the preset programming of the TV.
RCA	Separate connectors to connect audio or video equipment.
RF technology	Technology based on radio frequency, used for wireless connections.
SCART	Single connector to easily connect audio and video equipment.



PHILIPS

AQ95-56F-613KR
(report No.)

EC DECLARATION OF CONFORMITY

We , Philips Consumer Electronics B.V., P&A CC: Building SBP6
(manufacturer's name)

P.O.Box 80002, 5600 JB Eindhoven, The Netherlands
(manufacturer's address)

declare under our responsibility that the electrical product:

Philips	SLV5400 -/00 -/05 (Tx: SLV5400 -/00-T ; Rx: SLV5400 -/00-R)
(name)	(type or model)

Wireless TV link
(product description)

to which this declaration relates is in conformity with the following standards:

EN 300 440 part 1&2, (2001-9).
EN 300 220-1 v1.3.1
EN 301 489-1 V1.2.1
EN 301 489-3 V1.2.1
EN 60065:1998 ed.6
EN 60950:2000

(title and/or number and date of issue of the standards)

following the provisions of 1999/5/EC (R&TTE Directive)
and is produced by a manufacturing organisation on ISO 9000 level.

Eindhoven, 27/06/2005

(place, date)

K. Rysman
Approbation manager
(signature, name and function)



Need help?

Troubleshooting

See page 10

Online help: www.philips.com/support

Helpline

België/Belgique/Belgien	070 222 303 (€ 0.17)
Danmark	3525 8759
Deutschland	0900 1101211 (€ 0.12)
España	902 888 784 (€ 0.15)
France	08 9165 0005 (€ 0.23)
Ελλάδα	0 0800 3122 1280
Ireland	01 764 0292
Italia	899 23 45 06 (€ 0.25)
Luxemburg/Luxembourg	40 6661 6544
Nederland	0900 8407 (€ 0.20)
Norge	2270 8111
Österreich	0900 060 827 (€ 0.20)
Portugal	2 1359 1442
Schweiz/Suisse/Svizzera	0900 001 600
Suomi	0600 412 001
Sverige	08 5792 9100
UK (United Kingdom)	0906 1010 016 (£ 0.15)

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

DFU-SLV5400-AEN-V1.0